


Rep-kit


Standard Repair

1 Ensure surfaces are clean, dry and dust free.


2 Put on goggles and gloves provided.

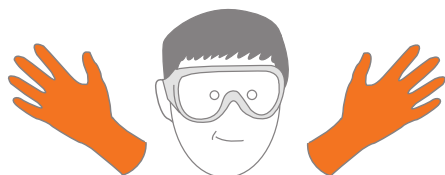


3 Cut matting to shape of repair using scissors provided, ensuring there is at least a 50mm (2in) overlap on all sides. Set aside for later use.

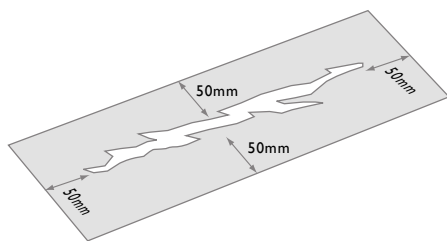


4 Carefully open resin pot and stir in catalyst powder with stirring stick provided.

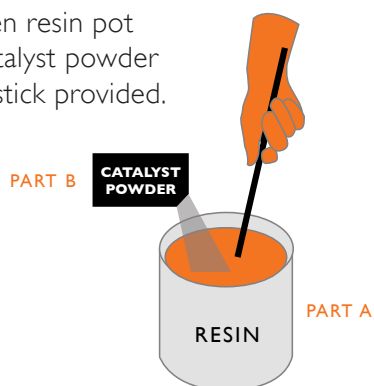


5 Time to work quickly - liberally apply pre-mixed resin to repair area making ready to receive matting. You have approximately 15 minutes total working time.

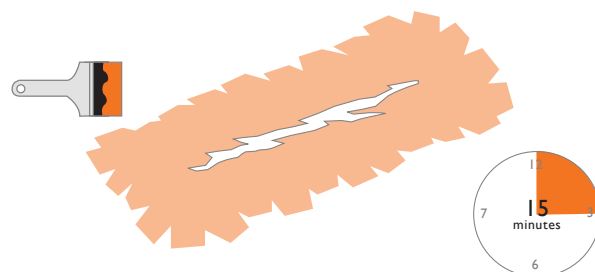

6 Whilst resin is still wet apply matting over wetted in area and then brush more pre-mixed resin over matting, ensuring you cover all the matting.

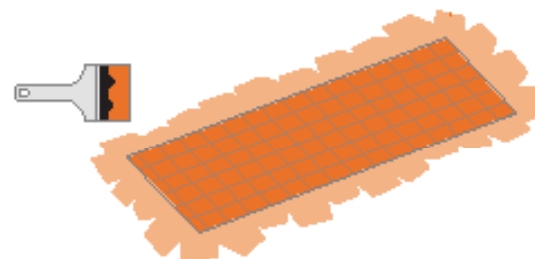

7 Once any remaining mixed resin has completely hardened it can be disposed of as domestic waste.

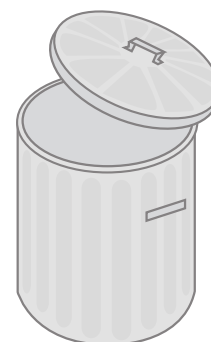

**MATERIAL SAFETY DATASHEET DOWNLOADABLE @ REP-KIT.CO.UK
OR CONTACT US FOR A COPY**

WIDOPAN Ltd

Systems House, Horndon Industrial Park, West Horndon, Brentwood, Essex CM13 3XL
Tel 0845 265 8008 Fax 0845 265 8009 www.rep-kit.co.uk